

RUSSELL PUMP

Russell Pump and Engineering Inc.
102 W. Chicago Street
Albion, IA 50005
641-488-2319

Model A510

Installation, Operation and Maintenance Information



Unit Inspection—Inspect the unit for damage. Report any damage to freight carrier immediately. Check motor nameplate to make sure voltage and phase match the available power supply.

Installation—Locate the pump as close to the liquid source as possible. Protect the pump from freezing. The pump should be located at a low point to keep the impeller submerged at all times. Always leave room around the pump for servicing and ventilation. units may be installed horizontally, inclined, or vertically. All piping should be independently supported and never forced into fitting. This will cause undue stress and could cause binding within the pump.